




Intertek
3073615

AIRREX[®]

AIRREX DEHUMIDIFIER

USER'S MANUAL

MODEL : ADH-100

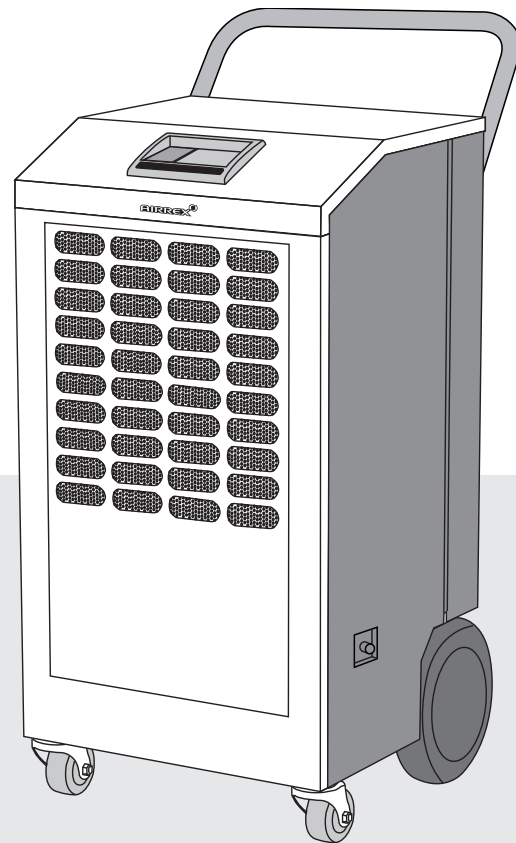

- ▶ Thank you for purchasing the unit. Before operation please read this user's manual carefully.
- ▶ Keep this manual on hand for reference.
- ▶ This unit is specified for use on the rated voltage power supply. For use outside the local electricity supply should be checked by a qualified electrician.
- ▶ It is essential that you read 'SAFETY INSTRUCTIONS' carefully before use and follow them at all times.
- ▶ The warranty form is on the last page. Please complete it now and keep it in a safe place.
- ▶ We have a policy of continual improving on our products. The contents (features and specifications) in this manual are therefore subject to change without notice.

TABLE OF CONTENTS

■ SAFETY INSTRUCTIONS	3~4
■ GENERAL ADVICE BEFORE USE	4
■ EXTERIOR DESCRIPTION	5
■ SPECIFICATIONS	6
■ CONTROL PANEL FUNCTIONS	7
■ HOW TO SET THE 'OFF' TIMER	8
■ HUMIDITY CONTROL OPERATION	9
■ 'ERROR' and WARNING INDICATORS	10
■ TROUBLE SHOOTING	11
■ CLEANING AND MAINTENANCE	12
■ WARRANTY	16

The following instructions are to ensure user's safety and to prevent any physical injury or material damage. Please read carefully and follow all instructions. There are two sections to these instructions: WARNING and CAUTION.

SAFETY INSTRUCTIONS

WARNING

- Use a circuit breaker for the capacity. (It may cause fire and electric shock)
- Before cleaning, disconnect the unit. (Otherwise risk of electric shock)
- Do not use a damaged power cable. (Short, fire or shock hazard)
- Do not use an extension lead unless of the approved type. (Risk of fire and / or electric shock)
- Do not place anything on top of the machine. (This could cause electric shock, malfunction or injury)
- Do not 'kink' or sharply bend the power cable nor put any weight on it. (The insulation may be damaged causing fire or electric shock)
- Turn off control panel after turn off circuit breaker first. (Risk of electric shock and / or malfunction)
- Do not use this unit on unstable or inclined surfaces. Always use on solid flat floor. (Risk of falling causing injury, fire or malfunction)


The following symbols are for your guidance:

= You must NOT. = You MUST.

Keep this manual in a visible location near the unit for easy reference.

INSTALLATION

WARNINGS REGARDING PROPER LOCATION FOR INSTALLATION

-  **WARNING** Do not use the unit in explosive environments or in areas where flammable gas leakage may occur.
- Do not use the unit in areas where it will be exposed to rain or water.
- Do not use the unit in a corrosive atmosphere.
- Do not install the unit on uneven or sloping surface. The unit may roll or topple over even if the casters are set to the locked position.

MOVING THE UNIT


Unlock the casters and push the unit to a flat, level surface and set the caster brakes to the locked position.

PLUGGING IN THE UNIT

Check the prongs and surface of the power cord plug for dust/dirt. If dust and/or dirt are present, wipe off with a clean, dry cloth.

Check the power cord, plug and prongs for damage or excess play.

If any damage or excess play is found, contact a qualified repair technician or a qualified electrician to perform replacement or repair of the power cord, plug or prongs.

-  **WARNING** If the power cord or plug is damaged, repair should only be performed by qualified electrical personnel.

-  **WARNING** Do not connect/disconnect the power cord or attempt to operate buttons with wet hands. This could result in electrical shock.

SAFETY INSTRUCTIONS

CAUTION

- Do not place this unit on uneven, unstable or inclined surface.
(This could cause malfunction)
- When storing this unit, keep it in a dry, cool place.
(To prevent corrosion and malfunction)
- If not being used for some time or if lightening is present, always disconnect from power.
(To prevent risk of electric shock, short circuit or fire)
- Do not spray water onto this unit nor use solvents
such as benzene, thinner or alcohol for cleaning.
(There is a risk of electric shock and / or short circuit)
- Designed for indoor use.

GENERAL ADVICE BEFORE USE

- * Ensure the safety of the location in which the unit is to be used.
- * Ensure the floor or ground is smooth and round.
- * Ensure you allow at least 20 inch air space all around the unit.
- * When in position LOCK the casters to prevent rolling.
- * Never use the unit at more than 2° incline.
- * If you use condensate pump connect with housing in the power box. (Electric panel)
- * You have to connect supply cord at least standard
If the supply cable is damaged, it must be replaced by the manufacturer,
its service agent or similarly qualified person in order to avoid a hazard.

FOR MAXIMUM EFFICIENCY


- * In airtight areas use vertical exhaust into ceiling.
- * If possible locate exhaust outlet through a window or door to outside.
- * Exhaust ducting should be no longer than 6.6 ft. for maximum efficiency.
- * Ensure correct electricity supply.




Waste electrical and electronic products must be disposed separately from normal household waste. When you dispose of such products, please recycle where facilities exist. Follow the guidance of your local authority and/or ask the shop where you purchased the product.

EXTERIOR DESCRIPTION

FRONT VIEW

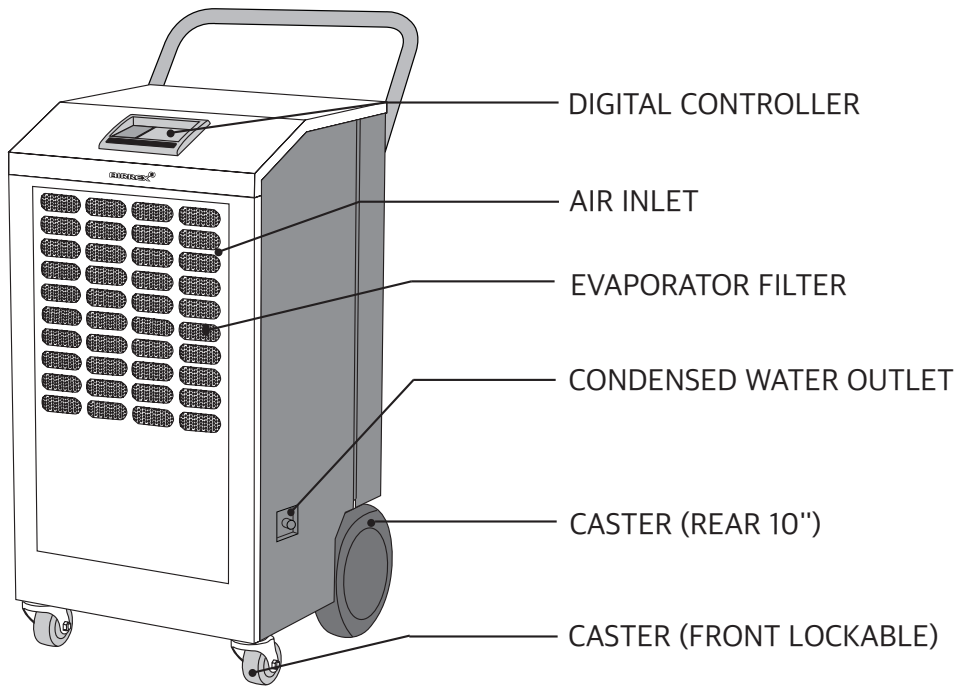


BACK & SIDE VIEW

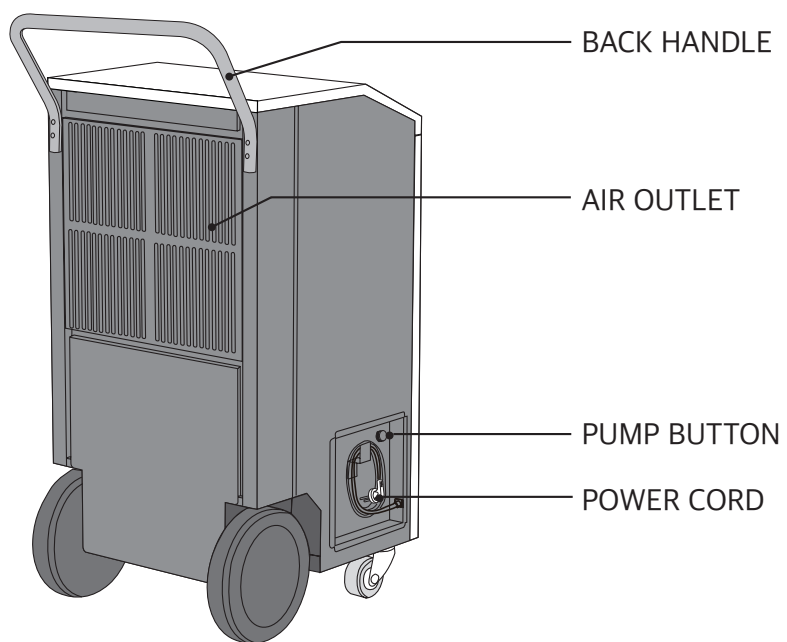

SPECIFICATIONS

MODEL		ADH-100
Capacity	gal/day	Maximum 32 (86°F 80%)
		Nominal 22 (80°F 60%)
Power supply		115Vac 60Hz 1Ph
Air Flow	ft ³ /min	400
Power Consumption	kW	1.2
Current Consumption	A	10
Refrigerant	lb	R-410A / 2.2
Dimensions (WxDxH)	inch	19.9 x 21.8 x 39.2
Weight	lb	132
Air Filter		Vinyl Chloride Mesh Cartridge
Safety Device		▶ High pressure switch ▶ Low pressure switch
		▶ 3 min. delay timer ▶ Fan motor protection
		▶ Automatic full tank shut-off ▶ Thermostat protector for compressor
Power Cord	Device	LCDI Nema 5-15
	Length	9.8 ft
Operating Range		41°F ~ 95°F, 30% ~ 90%
High Pressure	psi	441
Low Pressure	psi	128
Fuse in power box in Machine body		250V / 10A


CONTROL PANEL FUNCTIONS

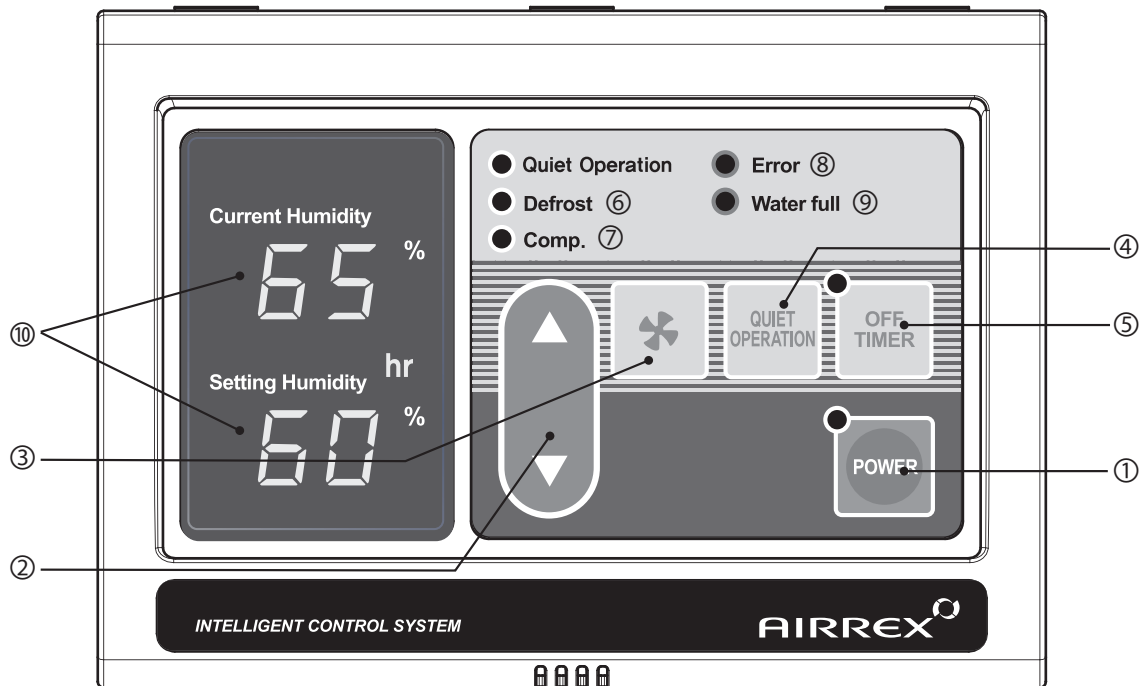

- ① Power : Use to power on / off.
- ② ▼▲ Button : Raises or lowers the setting temperature or sleep (off) time.
- ③ Fan : Controls fan speed. High / Medium / Low
- ④ Quiet Operation : Set fan speed slower than 'Low', the LED is on.
- ⑤ Off Timer : To set the length of time, once turned on, that you wish the dehumidifier to run for. You can set 0~24 hours. Time intervals are 0mins. up to 10 hours and then 1 hour between 10 and 24 hours.
- ⑥ Defrost : When the temperature of the evaporator is below -4°C the defrost valve operate and 'Defrost' led is on.
- ⑦ Comp. : When the compressor is operating, the LED is On.
- ⑧ Error : Error signal.
- ⑨ Water Full : Red light indicates 'Tank Full'. The compressor will shut off automatically. Empty tank and check if condensate wafer pump operate well.
- ⑩ Display : Display current humidity, setting humidity and sleep time in case of setting them. When the user set the sleep timer, 'hr' will be turned on.

HOW TO SET THE 'OFF' TIMER

This function enables you to set the length of time you want the unit to operate. You can set the time period from 30min. to 24 hours in 30min. and 1 hour increments.

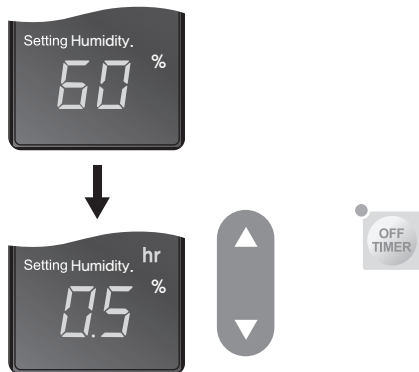


1. When unit is operating, press the 'Off Timer' button and set the length of time you want by pressing ▲ or ▼. Each time you press the button you will increase the 'time to off' period by 30mins. up to 10 hours, and 1 hour up to 24 hours. The display will show 5 for 30min and 1 for an hour. One and a half hours will show 1.5.



OFF TIMER LAMP IS ON

2. When you have finished setting the time period, the 'Off Timer' lamp will be on which indicates the unit is in sleep (Off Timer) mode.

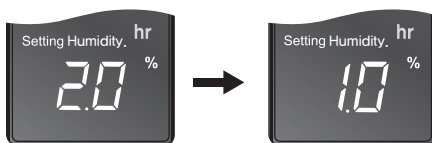

AFTER 1hr

3. If you press the 'Off Timer' button during its operation, the remaining time will be shown.



4. To CANCEL timing, press and hold 'Off Timer' button for 1 second. It will then switch the timer off automatically.

HUMIDITY CONTROL OPERATION



- When you turn ON, the setting humidity is displayed.
- You can change setting humidity.
- The display showing the set humidity will blink 3 times.



- When you push either ▼ or ▲ button, the setting humidity is changed.



- The display showing the setting humidity will blink 3 times.











- Limits of Setting humidity.

Current Humidity	Setting Humidity
0% - 95%	0% - 80%

Dehumidifier operates when current humidity is more than setting humidity.

Dehumidifying stops when current humidity is less than setting humidity.

'ERROR' and WARNING INDICATORS


Error Code	Problem	Cause	Corrective Action
 <p>Current Humidity % E1</p>	 Error High pressure	Blocked air filter Blocked / kinked exhaust duct Ambient temperature is too high	Ensure exhaust duct is not blocked / kinked Do not use the air conditioner if ambient temperature is higher than 113°F
 <p>Current Humidity % E2</p>	 Error Low pressure	Verify Electrical Refrigerant may be low	Clean Filters and Coils Verify Power (Voltage/Amps) Check Filters Evaporator/Condenser Check Evaporator/Condenser Coils Check refrigerant level and/or refrigerant leak.
 <p>Current Humidity % E3</p>	 Error Sensor	Temperature sensor has an electric short.	Exchange temperature sensor
 <p>Current Humidity % LF</p>	 Water Full Water full	Condensate tank is full	Check the condensate pump
 <p>Current Humidity % HU</p>	 Error Humidity Sensor	Humidity sensor problem	Check the Humidity sensor

TROUBLE SHOOTING

TROUBLE	CHECK	REMEDY
NOT WORKING	Power cable correctly connected	Connect cable correctly
	Power button "OFF"	Press POWER button to "ON"
	Fuse (supply) blown	Exchange fuse in board
	Breaker on switch board tripped	Check load capacity and reset
	Ambient temp. too high	Check operating temp. range
POOR DEHUMIDIFYING	Filter blocked with dust	Clean Filter
	Dust in heat exchanger	Clean heat exchanger
	Obstacle against inlet side	Remove and allow 20"(50cm). clearance


MANUAL PUMPING

If you move Dehumidifiers to another place it is necessary to empty condensate water in tank, so press pump button to empty water in tank.

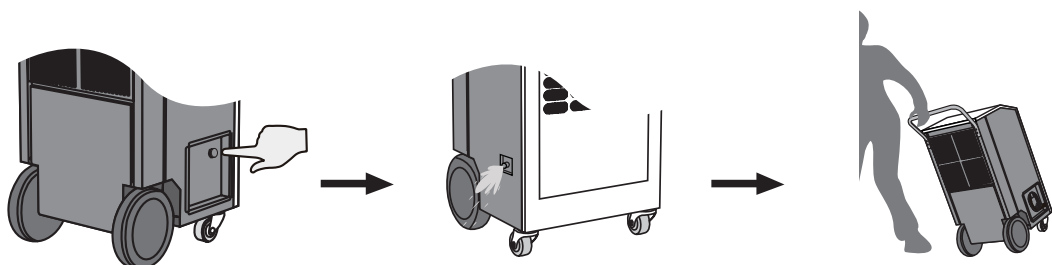


CLEANING AND MAINTENANCE

CLEANING THE AIR FILTERS

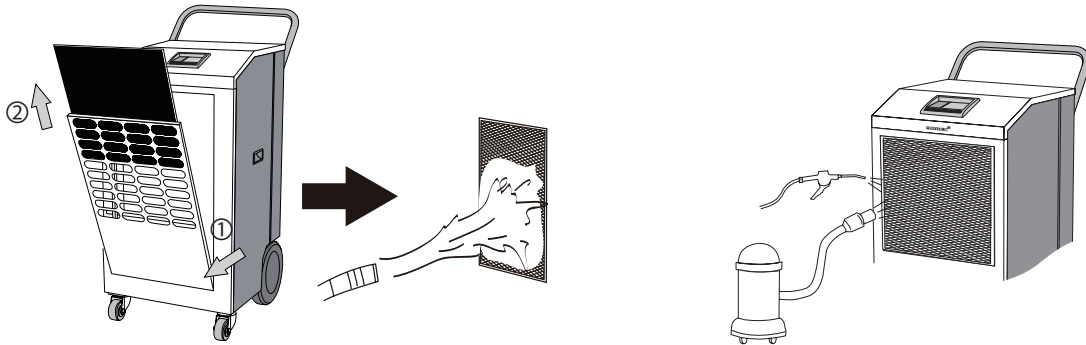


1. To remove filters, open the front case ①, and pull towards you. ②
2. Clean the filters with water or compressed air.
3. Clean heat exchanger unit with a vacuum cleaner or compressed air.

MAINTENANCE

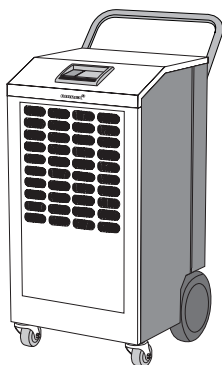

1. Turn "OFF" at control panel, remove plug from socket. Coil and store cable neatly.

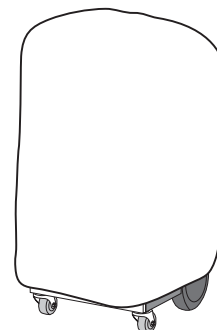

2. Keep machine suitably covered to prevent damage by damp, humidity and dust.

MEMO

MEMO

WARRANTY

(Applicable to first retail purchaser only)

AIRREX unit gives the more reliable performance, comfort and durability the more they are used. They are built under a strict quality assurance regime which includes inspection both during and after production and exhaustive reliability testing.

In the unlikely event you have any problems, please contact your dealer or distributor. If the problem is as a result of a production fault or failure, repairs will be undertaken free of charge during the period of warranty subject to the following warranty conditions:

1. If the problem has been caused by customer error or misuse, abuse or damage, then all repairs will be charged for.
2. This warranty applies to your country.
3. Proof and date of purchase must be supplied.
4. Please complete the details below and keep this warranty in a safe place.
5. All transportation charges back to the dealer are at customer's cost. Keep all original packaging to facilitate return. Return to customer will be at dealer's cost (if genuine warranty claim).

DESCRIPTION	DEHUMIDIFIER		
MODEL	ADH-100		
DATE OF PURCHASE		PRODUCT SERIAL NO.	

WARRANTY PERIOD	() Months	
DISTRIBUTOR	Name of Company	
	Telephone No.	

CUSTOMER DETAILS	Name :	
	Address :	
	Telephone :	

Manufactured by :
HEPHZIBAH CO.,LTD.
(Juan-dong) 86, Gilpa-ro
71beon-gil, Michuhol-gu,
Incheon, Korea
TEL : +82-32-509-5834
FAX : +82-32-502-5519
E-mail : airrex@hdtek.com
Website : www.airrex.biz

Distributed by :
Airrex USA
1191 Jewell Dr Ste 101 Waco, TX 76712

TEL : 888-535-8841
FAX : 469-574-7924
E-mail : sales@airrexusa.com
Website : www.airrexusa.com